


morphyrichards®

GrimeBuster steam cleaner

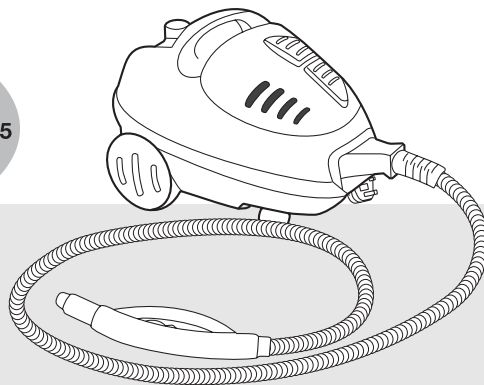

Please read and keep these instructions



getting the best from your
new cleaner...

Please study all instructions carefully before use.
This product is also supplied with a user guide CD ROM.

No steam

- Check the power supply.
- Check the steam switch is set to the on position.

WARNING: If the cleaner has been boiled dry it must be switched off for a few minutes to allow the safety cut-out to reset.

- Check water is in the tank.
- The cleaner may need descaling. We recommend the use of filtered water to reduce the scale.

(In hard water areas the cleaner will require regular descaling.
Follow the instructions on page 8.)



www.morphyrichards.co.uk

Important safety instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!
In addition we offer the following safety advice.

Location

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

Children

- Never allow children to use this appliance.

Personal safety

- **WARNING: The filling cap must not be opened during use.**
- Let the cleaner cool for a few minutes before re-filling.
- To protect against fire, electric shock and personal injury do not immerse cord, plug or cleaner in water or other liquid.
- The plug should be removed from the wall socket after use, before cleaning, filling or changing the accessories.
- The accessories get very hot. Allow to cool before changing.
- Make certain the steam has stopped before changing the accessories or putting the hose aside.
- **WARNING: Do not discharge the steam towards people. Danger of scalding.**
- **WARNING: Never touch the plug or cable with wet hands.**
- Steam must not be directed towards equipment containing electrical

components, such as the interior of ovens.

Other safety considerations

- Do not use any chemical detergents, perfumes, alcohol etc in water.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Morphy Richards spare parts and accessories.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact Morphy Richards using the replacement parts number on the front of this leaflet.
- The appliance must never be left running when unsupervised.
- This steam cleaner is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Product safety

- Never modify the cleaner in any way.
- When using the cleaner always keep it horizontal.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity which must be A.C. (alternating current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

WARNING: This appliance must be earthed.

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.

A

Features


- ❶ Filler cap
- ❷ Heater on/off button
- ❸ Steam on/off button
- ❹ Machine socket
- ❺ 'Heater on' indicator light
- ❻ 'Steam ready' indicator light
- ❼ 'Refill' indicator light
- ❽ 'Steam indicator' light
- ❾ Carrying handle
- ❿ Flexible hose
- ⓫ Hose plug
- ⓬ Handle with remote steam control
- ⓭ Handle control steam switch
- ⓮ Locking mechanism (safety lock)
- ⓯ Extension tubes x 2
- ⓰ Release button
- ⓱ Variable steam knob (optional)

Standard accessories


- ❶❷ Cotton towel
- ❶❸ Funnel
- ❶❹ Large floor brush
- ❶❺ Brush connector
- ❶❻ Jet nozzle
- ❶❼ Round bristle brush (metallic)
- ❶❽ Round bristle brush (nylon)
- ❶❾ Integrated window squeegee
- ❶❿ Triangular nozzle
- ❶❶ Sock for triangular nozzle
- ❶❷ Accessory bag (not shown)

Optional accessories

- ❶❸❶ Wall paper stripper
- ❶❸❷ Professional iron
- ❶❸❸ Iron pad

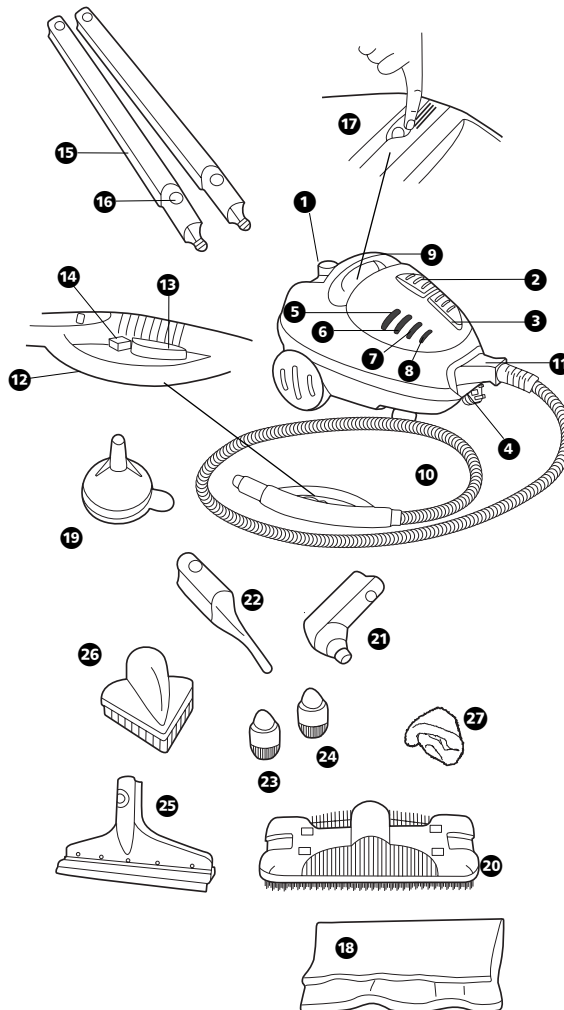

Optional accessories

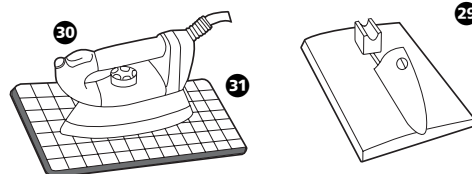

Setting up your steam cleaner





Filling the boiler

- 1 Unscrew the filler cap **1** anti-clockwise.
- 2 Fill the boiler with a maximum of 1.8 litres of water by using the funnel **19** provided. **A**
- 3 Do not use any detergents.
- 4 Screw the filler cap **1** clockwise until finger tight. Do not overtighten.

Attaching hose and accessories

- 1 Pull down the flap on the front of machine socket. **B**
- 2 Insert the plug on the end of the hose **11** into the machine socket **4** with the button side facing up, and push firmly until it clicks into place. **B**

- 3 Attach the desired accessory, ie. large floor brush **20**, triangular nozzle **26**, these need to be attached to the brush connector **21** before attaching it to the extension tube or handle. Jet nozzle **22**, window squeegee **25** to the extension tube **15** or directly to the handle **12**, depending on the application. The accessories vary per machine.
- 4 The round brush(es) **23** and **24** can be attached to the jet nozzle.
- 5 Join the extension tubes together, slide one tube into the other until it locks into place **C**.
- 6 Attach the tubes to the handle of the hose. Slide the handle into the extension tube until it locks into place **D**.
 - Some tasks may be easier with only one tube fitted or none at all.
- 7 To connect the desired accessory directly to the steam handle, slide the handle into the accessory head until it locks into place.
- 8 When using the large floor brush or the triangular brush, the brush connector needs to be fitted to the brush first, in order to attach the same to the extension tube.

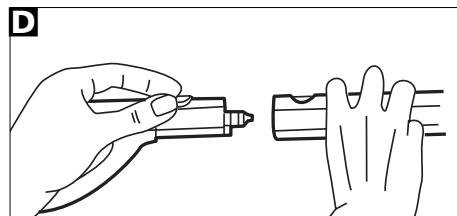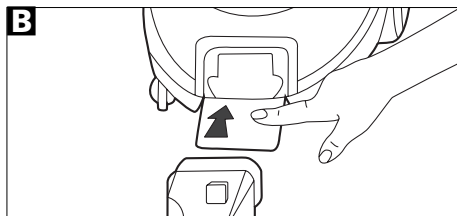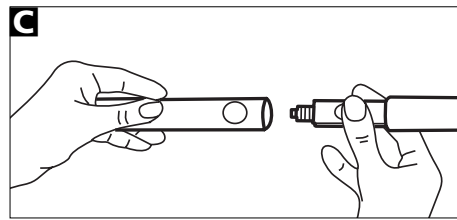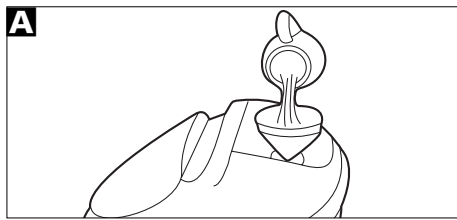

To fit the connector

- 1 Push the connector end, holding it upside down, fully into the brush inlet **E**.
- 2 Twist the connector $\frac{1}{2}$ a turn, until it is in place. **F**
- The fit between the connector and the tubes and/or handle is tight to ensure no steam leaks. It is recommended to keep both parts lubricated to facilitate connecting and disconnecting.
- 3 To detach the accessories, press the release button **G** and pull the items apart.

WARNING: Accessory heads may be hot. Please be careful not to trap your fingers.

- The triangular nozzle also has a cotton sock which fits over the bristles. Ideal for use on upholstery and bedding.





- Steam will be available in approx 10 mins. When the steam is ready for use the 'steam ready' light **6** will turn green.
- 2 Make sure that the locking mechanism **14** on the handle has been released. If you push the lock **14** towards the rear, the steam switch cannot be operated. Push the lock forward so that the steam switch is released. **G**
- 3 To make steam ready, press the 'steam on/off' button **3** and the orange light **8** will come on. Steam is now ready to be released.
- 4 To release steam, press the handle control switch **13**. At the start, always point the steam handle at a cloth until a steady flow of steam comes out.
- During steam release the green heater light will turn off.
- 5 To stop releasing steam, simply release the handle control switch **13**.

Operating your steam cleaner

- 1 Connect the unit to the mains and switch on the boiler heater by pressing the heater on/off button **2**. The 'heater on light' is illuminated.

Certain models only

- If your cleaner features a vari-steam knob **17** the steam flow can be adjusted to specific requirements.
- 6 Turn the vari-steam knob fully anti-clockwise for maximum steam and clockwise for minimum steam flow **H**.
- If the 'refill' indicator light **7** turns red, the boiler must be refilled.

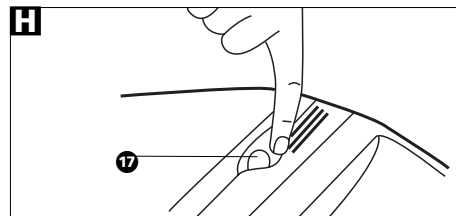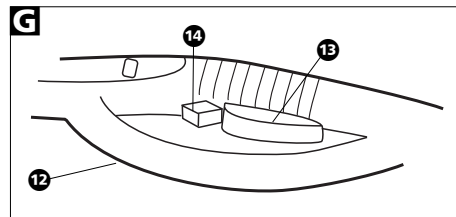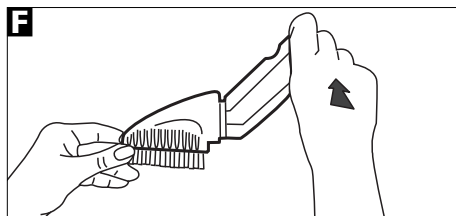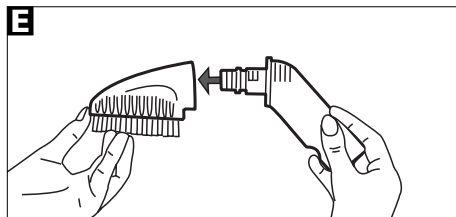

Re-filling

When the 'refill' light ⑦ turns red, there should be no steam available for release. The boiler needs to be refilled.


- 1 Switch off the boiler heater by pressing the heater on/off button ②.
- 2 If there is pressure in the boiler, the filler cap ① will revolve, a safety feature prevents it from being unscrewed.
- 3 Release any steam pressure in the system using the steam on/off switch ③ on the machine and handle ⑬. Switch off the steam release button ③. The cap can then be unscrewed.
- 4 Unplug the mains cable. Leave the product with the filler cap off for 10 minutes before refilling.
- 5 Refill the boiler using the funnel A.
- 6 Use warm water to reduce heat-up time.

WARNING: Do not pour cold water into a very hot boiler as steam and hot water may be blown out of the filling hole and can scald.

- 7 Screw the cap back on. Start operation again. (See operation section).

Switching the unit off

- 1 Switch the unit off by means of switches ② and ③.
- 2 Remove the hose plug ⑪ from the unit by pressing the release button, holding down the socket flap simultaneously.
- 3 Remove the plug from the mains socket.
- 4 Any remaining water can be left inside the unit.
- To avoid deforming the brushes ②③ and ②④ ensure that the brushes are allowed to cool down before storing.

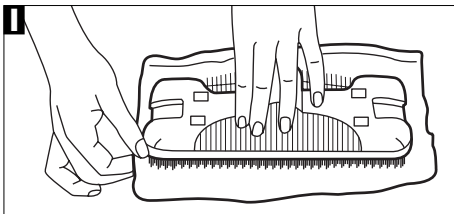

Use of accessories

Steam handle ⑫

To avoid spurting of heavy and moist steam it is recommended always to attach an accessory to the steam handle.

Large floor brush ②①

Recommended applications include:

- carpets and rugs
- sealed timber and parquetry
- ceramic tiles
- vinyl

- 1 The large floor brush can be attached to the extension tubes or directly to the steam handle, provided that the brush connector ②① is fitted.

- 2 Stretch the cotton cloth lightly over the bristles using the clips provided on the brush head ①.

- 3 Switch on the steam and move the cloth covered brush gently over the surfaces to be cleaned.

- Replace the cloth regularly so that more dirt can be collected and to avoid too much moisture being applied to the floor and leaving it very wet.
- Heavily soiled areas will require more attention to allow steam more time to act on dirt while lightly soiled and smooth surfaces will only require a quick wipe.

Jet nozzle ②② and round brush ②③ and ②④

Recommended applications include

- Hard to reach surfaces such as corners and joints.
- Toilets and sanitary installations
- Venetian blinds

Without round brush

- Defrosting freezers
- Eliminating odours and creases in clothing. Firstly place the garment on to a clothes hanger and spray steam at a distance of around 10-15cm.
- Removing dust from plants. Maintain a distance of around 30-40cm to avoid burning leaves by direct contact with steam.

- 1 The jet nozzle can be attached either directly to the handle or via the extension tubes.
- The closer you hold the jet nozzle to the object to be cleaned, the better the cleaning results will be.
- The round bristle brushes can be snapped onto the end of the jet nozzle.
- The nylon brush is suitable for most cleaning applications such as, grout, tapware, toilets, bathrooms, fridge seals and sliding door runners.
- The metallic brush is suitable for more stubborn dirt where a more abrasive action will not affect the surface, such as BBQ plates and lime scale in toilets.

Sanitising and removing dust mites, allergies from bedding and upholstery

Fit the triangular nozzle with cotton cloth fitted and pass the steam slowly and evenly over the surface ensuring all areas are treated. Repeat the process. Leave the mattresses to dry thoroughly before covering.

Triangular brush 25

- Recommended applications include:
- bedding for removal of dustmites and their allergens. Allow mattresses to dry naturally.
 - smaller washable areas, such as: kitchen and bathroom surfaces
 - car interiors
 - upholstery

Integrated window cleaner 25

- 1 Fit the window cleaner to the handle (attach extension tubes if required).
- 2 To 'steam clean' the surface, place the thick rubber of the accessory head against the glass, whilst releasing the steam. Keep the steam control switch 13 pressed until the entire surface is covered with steam.


- 3 To remove excess water turn the accessory head around with the squeegee against the surface. Move the squeegee in straight passes from top to bottom. Wipe the rubber blade and the bottom edge of the window dry after each pass.



Professional iron 30 (certain models only)*

The high steam professional iron produces up to 6 times more steam than a normal domestic iron and is up to 4 times faster.

Note: Do not stand the iron on its end, always place it with the soleplate down on the iron pad 31 supplied.

- 1 Firmly insert the plug of the iron into the machine socket of the cleaner until it locks in place.
- 2 The temperature setting on the iron needs to be set to the correct setting for the fabric concerned.
- 3 Press the steam on/off button 3 on the machine. Both orange lights will come on. The light on the iron will turn off when it has reached the desired temperature.
- 4 When the steam is ready for use and the iron is hot, place your thumb on the large switch located at the top of the iron, to release steam.
- 5 Release some steam away from the fabric before commencing ironing until a steady flow of steam comes out.
- 6 The iron can be used vertically to 'steam-iron' curtains, dresses etc.

Wall paper stripper 29 *(certain models only) 

- 1** Fit wallpaper stripper directly to the hose handle, locking into place. 
- 2** Press the steam on/off button . The orange light will come on.
- 3** Place the wallpaper stripper with its entire surface on the edge of a sheet of wallpaper. Press the handle control steam switch and allow the steam to penetrate until the wallpaper is soaked through (approx. 10 sec.).
- 4** Without switching it off, move the wallpaper stripper to a new location.
- 5** Use a putty knife to lift the loosened wallpaper, and pull it off completely.

* These accessories are available as optional extras, if not supplied with your machine, please contact our helpline for more information.

Maintenance**Cleaning the boiler**

- 1** Disconnect from the mains and make sure it is cold.
- 2** To clean the boiler, fill boiler with water and shake it vigorously to loosen any scale that has settled at the bottom of the boiler.
- 3** Pour the water out of the boiler and the scale will be flushed out.

Descaling the boiler

In order to keep the heat-up time constant it is recommended to de-scale your cleaner at regular intervals.

- 1** Mix one litre of water with 0.25 litres of vinegar and pour into a boiler with the funnel provided.
- 2** Shake the cleaner and then allow the mixture to work for at least one hour.
- 3** Empty and rinse the boiler until water is clear.

Consumables


If you experience any difficulty in obtaining service or spare parts, please telephone our customer helpline (during office hours)

**Helpline**

If you have any difficulty with your appliance do not hesitate to call us. We are likely to be more help than the store from where it was bought.

Please have the following information ready to enable our staff to help you.

- Name of product
- Model number as shown on the underside of the appliance.

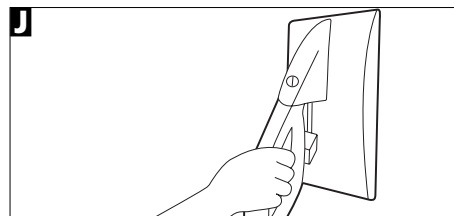

Troubleshooting

Fault	Possible cause	Solution
No steam	No electrical supply.	Check the fuse, plug and socket.
	Switches off.	
	Safety lock on hose handle engaged.	Disengage the safety lock.
Very little steam	Variable steam controller not open. (Some models only)	Adjust steam controller knob.
Very long heat up time. Loud whistling noise accompanied by steam from the rear of the machine.	Limescale build-up inside boiler.	Descale.

If you encounter any other problems with the product, contact our Morphy Richards helpline.

Two year guarantee

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (1-5) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example, the product must have been regularly descaled, as instructed.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1** The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2** The appliance has been used on a voltage supply other than that stamped on the products.
- 3** Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4** Where the appliance has been used for hire purposes or non domestic use.
- 5** The guarantee excludes consumables such as the cotton cloths.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



morphy richards®

The After Sales Division
Registered address
Morphy Richards Ltd, Mexborough
South Yorkshire, England, S64 8AJ

Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119

VC70516M UK Rev 1 0504